


# WIRELESS FOOTSWITCH(MT)

## OVERVIEW

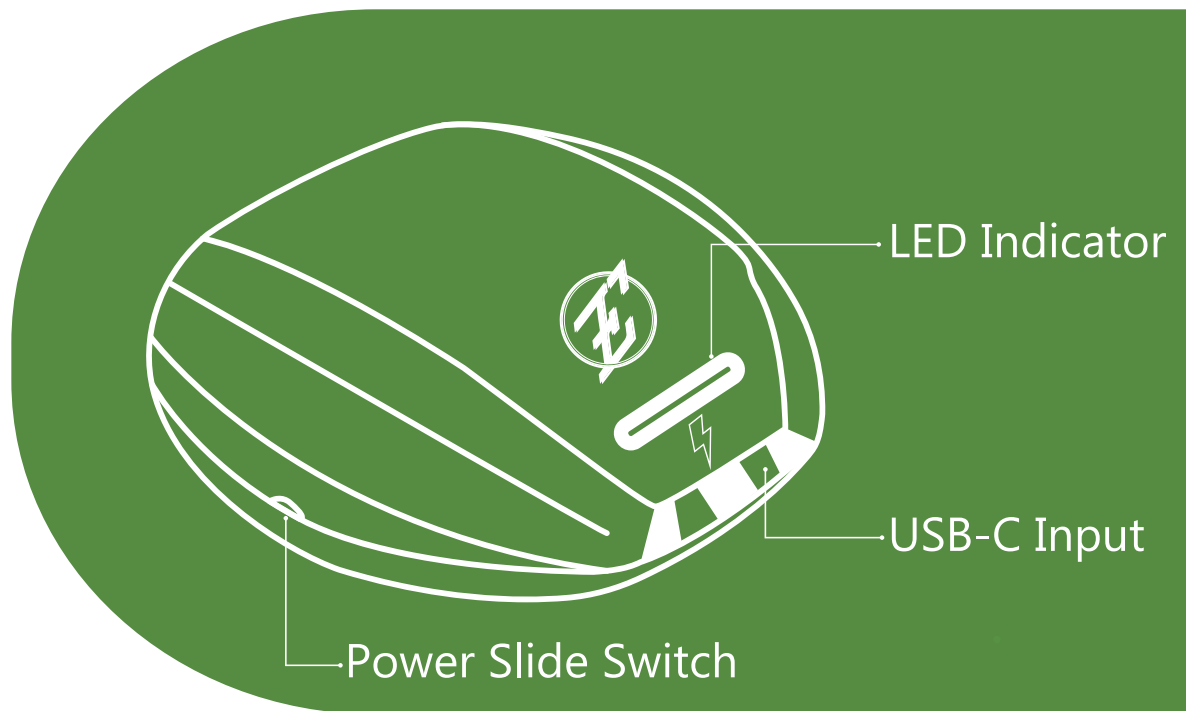

## FEATURES

- 1) Compatible with P3 Pro/P2S Pro/EvoTech Pro and More To Come.
- 2) Multi-Color LED Indicates Bluetooth Connection Status.
- 3) Solid Construction and Innovative Minimalistic Design.
- 4) Non-Slip Rubber Bottom for Enhanced Stability.

## SPECIFICATION

<b>Dimensions(L x W x H)</b>	89 x 84 x 30 mm
<b>Charging Voltage</b>	5V
<b>Weight</b>	6.6oz (187g)
<b>Charging Port</b>	USB-C
<b>Recharging Time</b>	2hours
<b>WorkingTime</b>	Up to 120hours

## LED INDICATOR STATUS

- 1) **Scanning Mode:** Red And Blue Lights Alternately Flash.
- 2) **Connection Succeeded:** Blue Light Blinks (1 Blink Per Second).
- 3) **Low Battery Warning:**  
Battery Level Below 20%, Red Light Flashes Rapidly.  
Battery Level Below 5%, Red Light Stays On Continuously."
- 4) **Device Malfunction:** Red And Blue Lights Stay On Simultaneously.
- 5) **Charging:** White Light Stays On.
- 6) **Fully Charged:** Yellow Light Stays On.

## INSTRUCTION

Use The Wireless Footswitch To Start/Pause The Wireless Tattoo Pen Machine.

## POWER ON/OFF

Slide The Switch To Turn On/Off.

## PAIRING

- 1) Turn On The Footswitch. The Flashing Red And Blue Lights Indicate That The Footswitch Is Ready For Pairing.
- 2) Ensure That The Device's Bluetooth Mode Is Enabled. It Will Automatically Connect To Your Footswitch.
- 3) Once Connected, The Flashing Blue Lights On The Footswitch Will Indicate A Successful Connection.

## WORKING MODE

There Are Two Distinct Working Modes Of The Footswitch.

### **Maintain Mode**

In This Mode, Tap And Hold The Footswitch To Keep The Machine Running. Release The Footswitch To Pause The Device. Please Refer To The Tattoo Machine's Manual For Activation Instructions.

### **Momentary Mode**

In This Mode, A Single Tap Will Start Or Pause The Device. Please Refer To The Tattoo Machine's Manual For Activation Instructions.